Publication No. MB 3058-44
1/96

MODIFICATION INSTRUCTIONS

for the

KODAK X-Omatic MULTILOADER 300

Service Code 3058

MODIFICATION No. 44

Type 2

PURPOSE:
To protect the FITTINGS.

IMPORTANT : Use qualified service personnel to install this modification !

SERIAL NUMBERS : : all SERIAL NUMBERS < 3000

INSTALLATION TIME : Approx. 0.5 hours

SPECIAL TOOLS : POWER DRILL

PARTS REQUIREMENTS : MOD KIT #44 PN 9216766

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak prior to publication.

No patent license is granted by this information.

Kodak reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

PARTS LIST

PART NUMBER	DESCRIPTION	QTY
9216766	MODIFICATION KIT No 44 consists of:	
MA 3058-44	MODIFICATION INSTRUCTIONS	1
9216761	PROTECTIVE PLATE	1
4283121	SCREW M4x10	2
4853251	NUT M4	2
4480032	WASHER 4.3 mm	2
8997244	MODIFICATION LABEL	1

INTRODUCTION

The PROTECTIVE PLATE will prevent the FITTINGS from breaking if a CASSETTE falls down behind the XML300.

INSTALLATION

1. Switch off the XML300.

2.. Take off the FITTING PLATE.

3. Mark the position of the 2 holes. See figure 1 on page 4.

4. Drill two 5 mm holes and remove all burrs.

5. Mount the PROTECTIVE PLATE. Use SCREWS, NUTS and WASHERS from the KIT.

6. Mount the FITTING PLATE.

7. Circle 44 on the MODIFICATION LABEL

8. If the MODIFICATION LABEL in the XML300 does not include MOD 44, add the LABEL from the KIT.

9. Switch on the XML300.

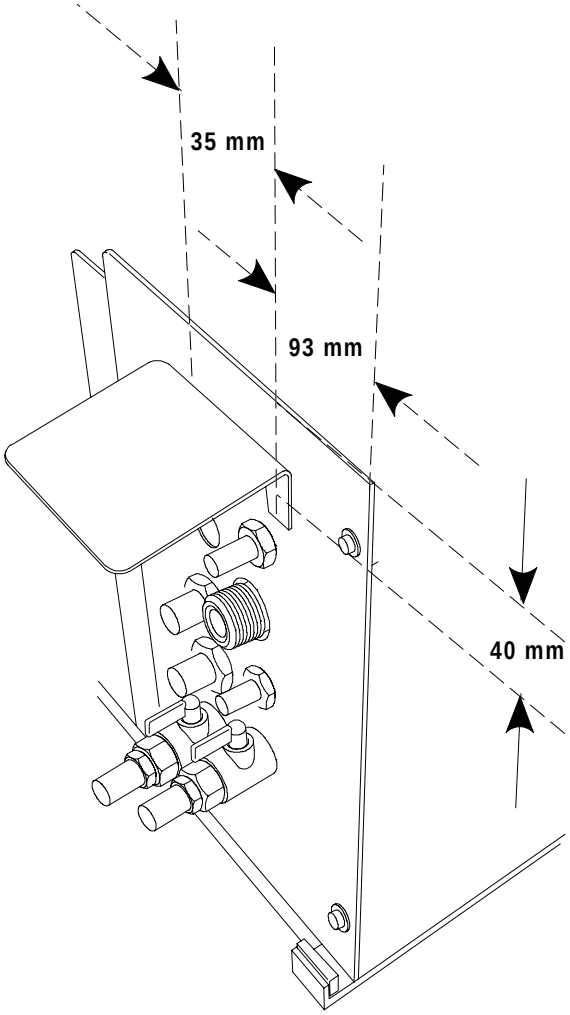

figure 1

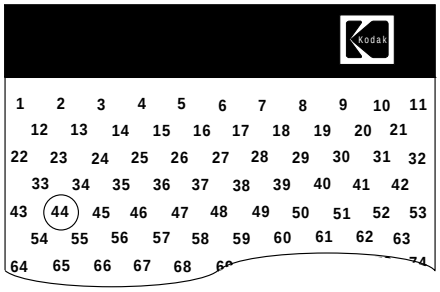

figure 2